

Fingerings for T.WI

C	C	C#	C#	D	Eb	Eb	E	F	F#	F#	G	G	G	G#	G#	A	A	A	Bb	Bb
*																				
B	B	B	C	C	C	C	C	C#	C#	C#	D	D	D#	D#	E	F	F#	F#	G	G#
			*/**				**		**	**		**	**	**	**	**	**	**	**	**

*) RH pinky finger covers both pinky keys

**) Casio 2nd octave fingering

Settings for T.WI

BREATH	OFF	AT	CC 1	CC 2	CC 7	CC 11	CC 1+33	CC 2+34	CC 7+39	CURVE	-4	-3	-2	-1	LIN	+1	+2	+3	+4	S1	S2	S3	S4
↑										←													
MIDI CH	1	2	3	4	5	6	7	8	9	10	11	12	13	14	15	16	VARIOUS	RESET	GLIDE	PB	MOD	TR+2	TR-7
↓																	→						

To apply settings: unplug USB, hold joystick in arrow direction, finger the RH combo for the wanted setting and plug in USB. When you see Teensy LED light up, settings have been applied and saved. Release joystick and play. To change another setting, repeat procedure.

*) This toggles current setting on/off