

## Final Drive Ratio (FDR) Checker

## Usage Guide













To finish the test, switch the car
and radio transmitter, then
disconnect the sensor cable
from the ESC to the Y adapter.
Unplug the cable from the
motor that goes to the Y adapter
and finally reconnect the cable
from the ESC.