## **Resistor Decade:**

first switch on each bank is a bypass switch. Make sure this in the up position if you do not use this bank. Otherwise the signal is not put through.

For instance if you need 5k, flip switch 0 in bank "1k multiplier" to the off position to activate the 1k bank. Switch the switch indicating 5 in the bank of 1k, to the on position to activate 5k.

Remark: The resistors have a tolerance of ±5%.