

# Ambiance

Tiny USB-C powered, wired & Bluetooth lighting system

Datasheet - Active product



## Main features

- USB type C powered
- Bluetooth connectivity
- Very low latency (20ms)
- Up-to 200 LEDs or 3A
- Rubber paddings
- Small form factor (57.6 x 32.0 x 8.0mm)

## Applications

- 5V RGB LED strips (WS2812B or WS2813B)
- PC/Laptop lighting setup
- USB LED strip

## Description

Ambiance is a tiny lighting system device which allows you to drive RGB LED strips from a computer (PC/Apple/Linux) over Bluetooth or USB.

Ambiance can drive an LED strip containing up to 200 LEDs and current sourcing up to 3A.

Product ref code	Temperature [°C]	Product Size [mm]
AMBAXXX	-20 to +70	57.6 x 32.0 x 8.0


# Table of contents

<b>1 Description</b>	<b>3</b>
1.1 Ambiance device . . . . .	3
1.2 Cable . . . . .	3
1.3 Assembly . . . . .	3
1.4 Attaching Ambiance to the LED strip . . . . .	4
<b>2 Specifications</b>	<b>5</b>
2.1 Absolute maximum ratings . . . . .	5
2.2 Electrical characteristics . . . . .	6
2.3 Thermal & physical characteristics . . . . .	6
<b>3 Use case scenarios</b>	<b>7</b>
3.1 Ambiance USB tethered . . . . .	7
3.2 Ambiance Bluetooth paired . . . . .	7
<b>4 Prismatic Software</b>	<b>8</b>
4.1 Download/Install Prismatic (Psieg version) . . . . .	8
4.2 Setting up Ambiance via Bluetooth (Windows users) . . . . .	8
4.3 Setting up Ambiance via USB (Windows users) . . . . .	10
4.4 Setting up Prismatic . . . . .	11
<b>5 Revision history</b>	<b>16</b>
<b>6 Appendix</b>	<b>16</b>

# 1 Description

## 1.1 Ambiance device

Ambiance has a USB type C input so it can be powered up using any wall adapter and/or to be plugged in to a computer. The output is a three pins header (GND / SIG / 5V) to be connected/soldered to an LED strip accordingly.

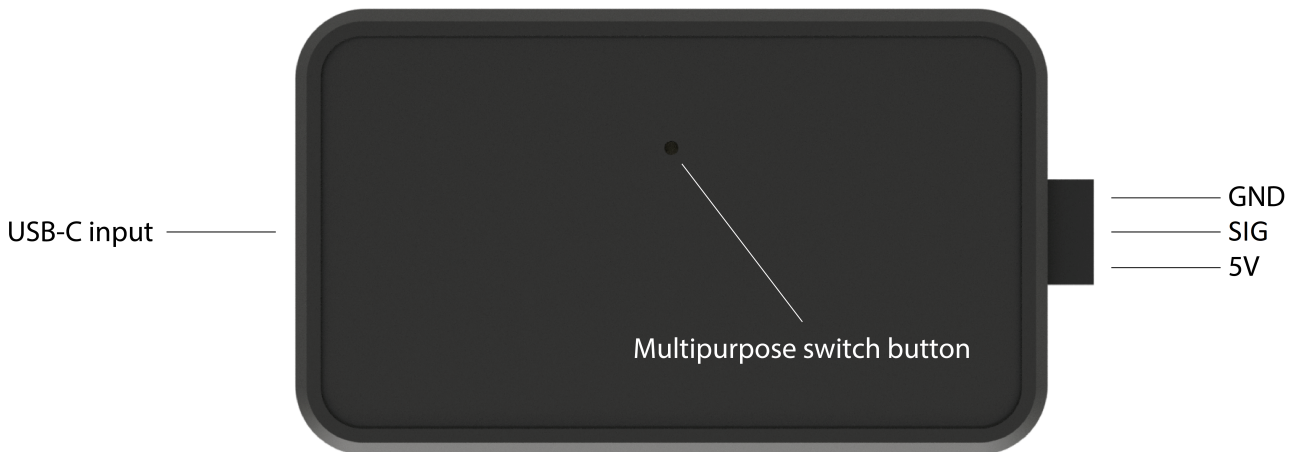

## 1.2 Cable


A three pins ribbon cable is also provided to ease the connection between the Ambiance device and the LED strip. Pay attention to the pinout below.




## 1.3 Assembly




### 1.4 Attaching Ambiance to the LED strip

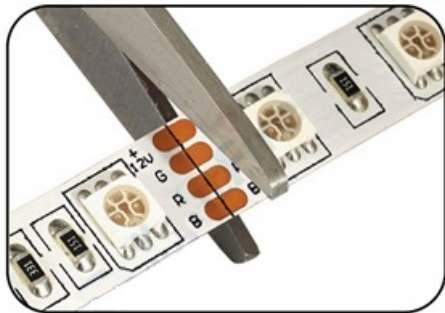


1. take led strip, cut the led strip light

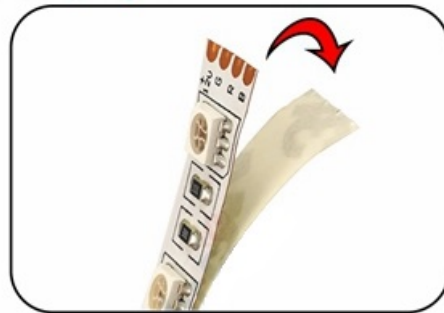

2. peel the led strip light 3CM off

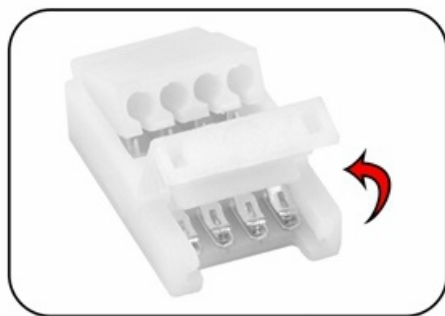

3. flip led connector cover over

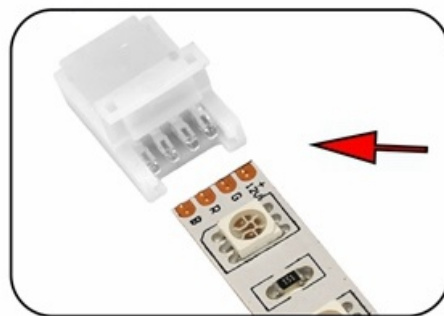


4. put the led strip light into the led connector



5. close the connector cover

Pay attention to the position of the black triangle on the LED strip to attach the connector to the correct end of the strip.

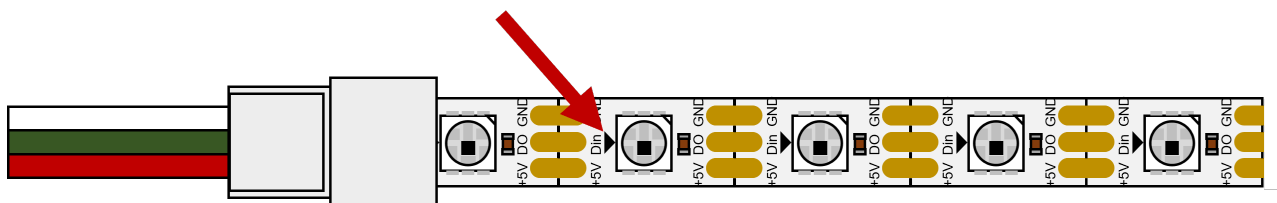

## 2 Specifications

### 2.1 Absolute maximum ratings

Stresses above those listed as “absolute maximum ratings” may cause permanent damage to the device. This is a stress rating only and functional operation of the device under these conditions is not implied. Exposure to maximum rating conditions for extended periods may affect device reliability.

<b>Symbol</b>	<b>Parameter</b>	<b>Maximum Value</b>	<b>Unit</b>
Vusb	USB Supply Voltage	-0.3 to 6.0	V
Iusb	USB Supply Current	3.0	A
BTpwr	Bluetooth Transmitting Power	4	dB
BTrate	Bluetooth Transmission rate (SPP)	40'000	bytes/s
BTbaud	Bluetooth baudrate	1M	bauds
TOP	Operating Temperature	-20 to 70	°C
TSTG	Storage Temperature	-40 to 80	°C

This device is sensitive to electrostatic discharge (ESD), improper handling can cause permanent damage to the part.

## 2.2 Electrical characteristics

Symbol	Parameter	Test Conditions	Min.	Typ.	Max.	Unit
Vusb	USB Supply Voltage		4.5	5.0	5.5	V
Iusb	USB Supply Current		0	-	3.0	A
DatOut	Data voltage output		0	-	3.3	V
5Vout	5V power rail ripple	100 LEDs ON in fire mode	50	200	300	mV
Idd	Nominal current consumption	LEDs OFF / BT ON	27	39	42	mA
BTsens	Bluetooth receiving sensitivity		-	-91	-	dBm
BTpwr	Bluetooth Transmitting power		-	4	-	dB
BTrng	Bluetooth distance	In open field	10	20	30	m
Lat	PC to LEDs latency	100 LEDs / via BT	15	18	30	ms


## 2.3 Thermal & physical characteristics

Symbol	Parameter	Test Conditions	Min.	Typ.	Max.	Unit
Top	Operating Temperature	50% Relative humidity	-20	-	+70	°C
Tstg	Storage Temperature		-40	-	+80	°C
W	Device Weight		-	15	-	g

### 3 Use case scenarios


#### 3.1 Ambiance USB tethered

In this mode, Ambiance is connected to a computer and the data flows through USB. Hence the computer provides both the power and the data to drive the LED strip.

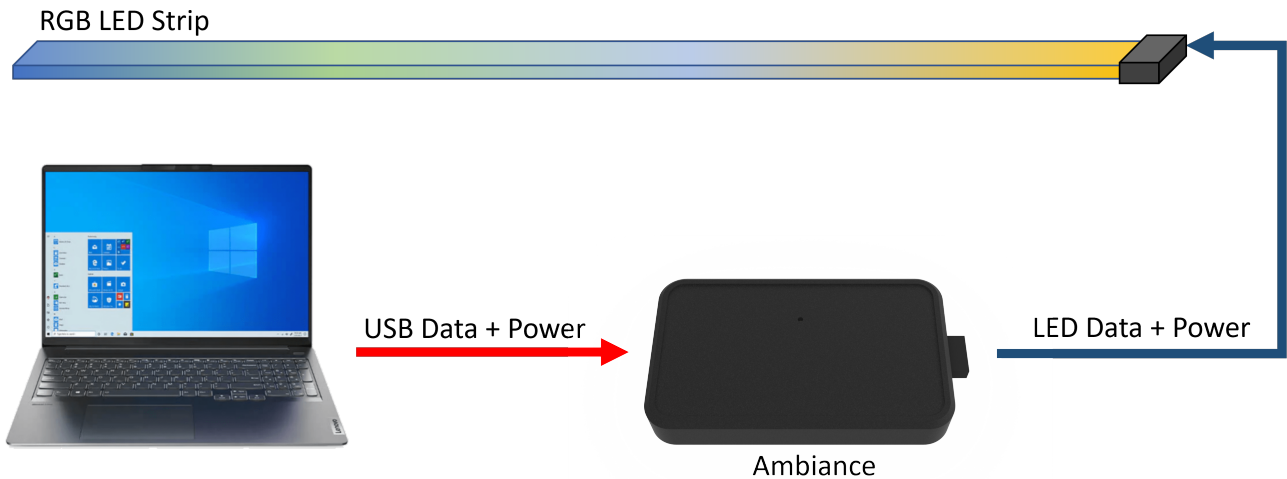

#### 3.2 Ambiance Bluetooth paired

In this mode, Ambiance is paired to a computer via Bluetooth. Any kind of USB-C wall adapter/power bank can be used to power supply the device. The data used to drive the LED strip flow through Bluetooth. Thus the LED strip can be placed anywhere 10m around the computer while not being physically attached to the computer.

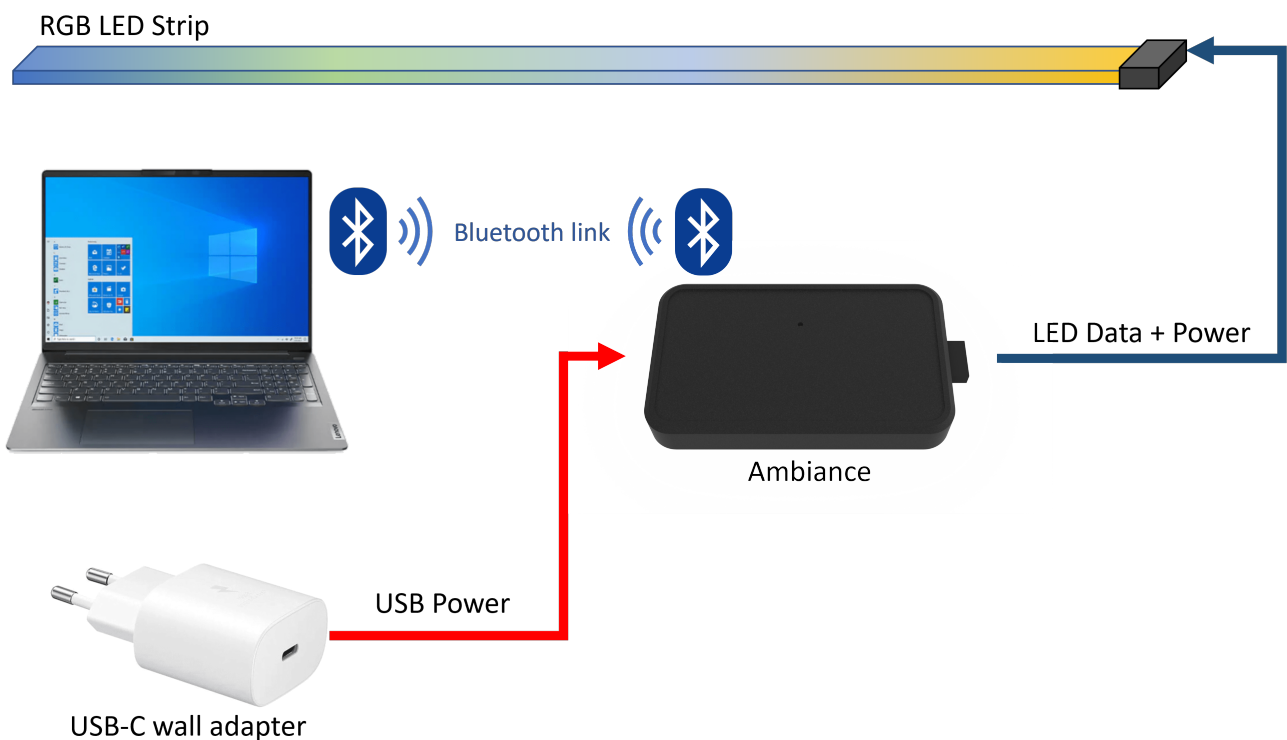

## 4 Prismatic Software

### 4.1 Download/Install Prismatic (Psieg version)

Many thanks to [Psieg](#) and team on Github for continuously improving updated versions of Prismatic.

Here below you can find the different installation packages:

- Windows users: [Prismatic for Windows x64](#)
- Apple users: [Prismatic for Apple](#)
- Linux users: [Prismatic for Linux](#)

Then launch the package and follow the setup instructions to install Prismatic on your computer.


### 4.2 Setting up Ambiance via Bluetooth (Windows users)

In this mode, your computer can send the display data to Ambiance and the LED strip over Bluetooth. Although Ambiance still needs to be connected to some power source via USB-C it is not required to be physically tied to the computer

Here below is the procedure to set this up accordingly.



**Step 1:** Plugging in Ambiance to an USB power source (wall adapter, power bank,...).

**Step 2:** Open up Windows Settings by clicking on the gear icon (on windows 8, 10 & 11) Then look for **"Bluetooth and devices"** or **"Devices"** depending on which OS you are working with (**1** in the figure below). Now click on **"Add Bluetooth or other devices"** (Windows 10) or **"Add device"** (Windows 11) (**2** in the figure below).

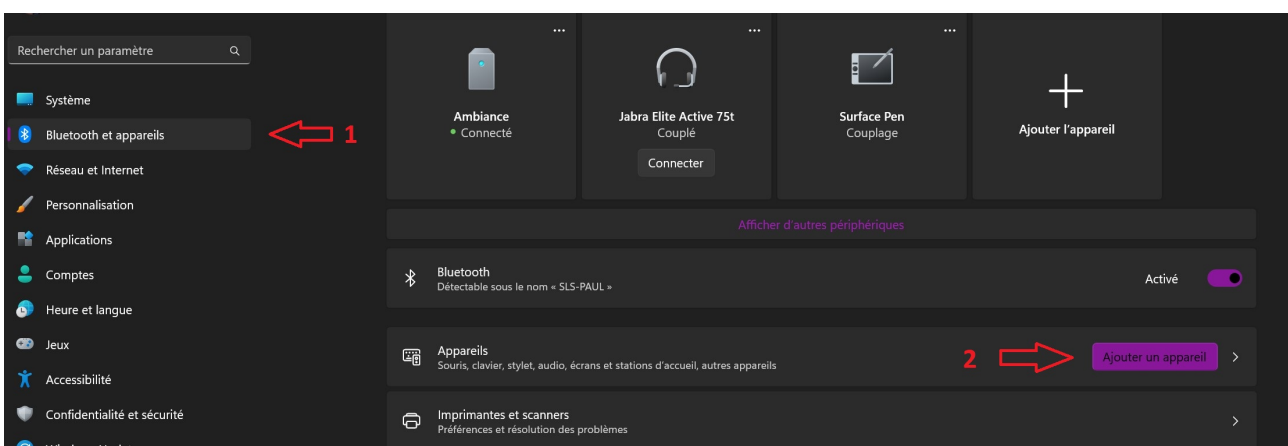




**Step 3:** A new window will pop up showing options to add a new device. Click on **"Bluetooth"**. After that, wait for a little while then **Ambiance** should show up in the device list if thoroughly power supplied as per both pictures below:

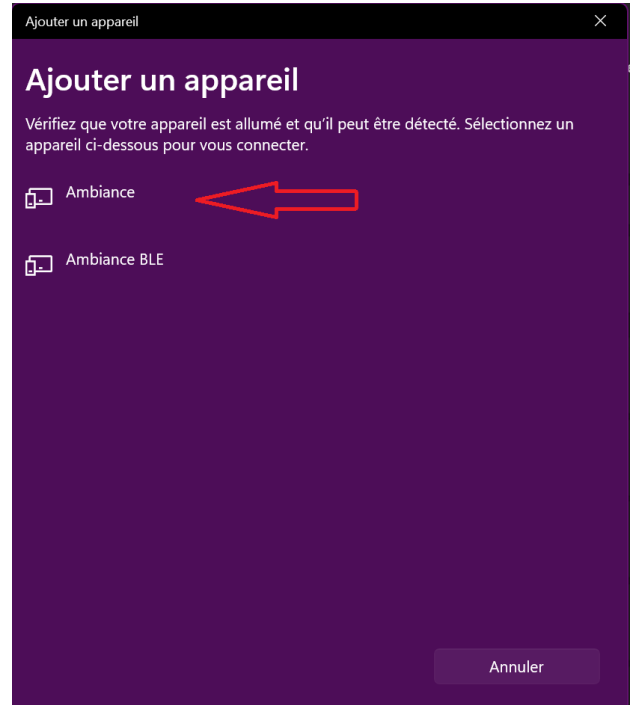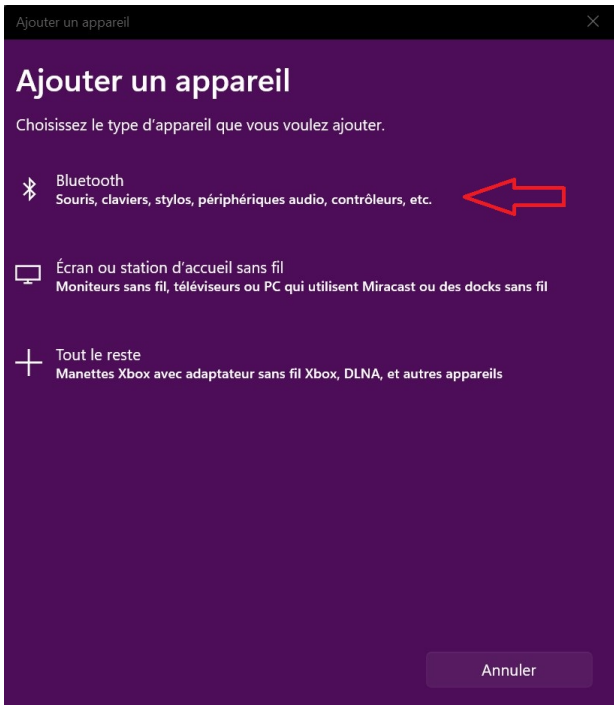


**Step 4:** In the windows search bar, type in **"Device manager"** then click on it. A new window will show up as per the picture below. Scroll down to **"Ports"** and two more Bluetooth COM ports are now visible. Take a note of both COM port names. In this case the two Bluetooth COM ports are named: **COM3 & COM4**.

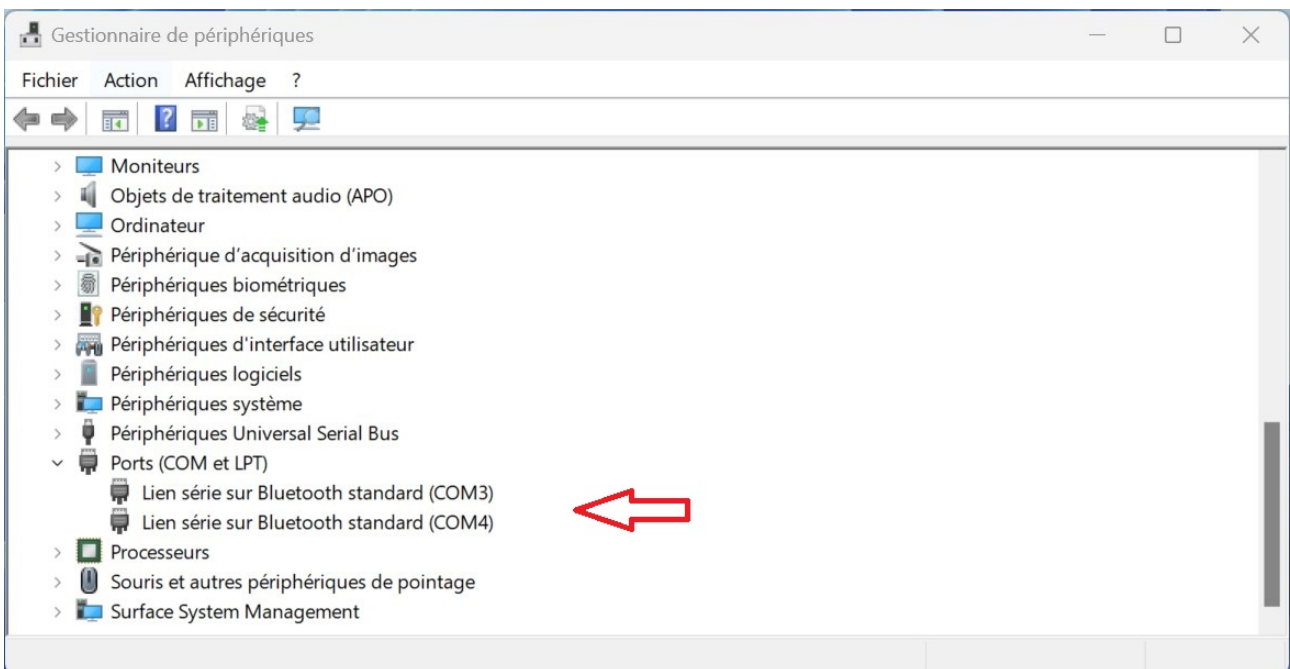

### 4.3 Setting up Ambiance via USB (Windows users)


Simply plug-in the device to any PC, then open up the device manager.

To do so, in the windows search bar, type in "**Device manager**" then click on it. A new window will show up as per the picture below. Scroll down to "**Ports**" and two more Bluetooth COM ports are now visible. Take a note of the COM port name. In this case the USB peripheral COM port is named: **COM21**.

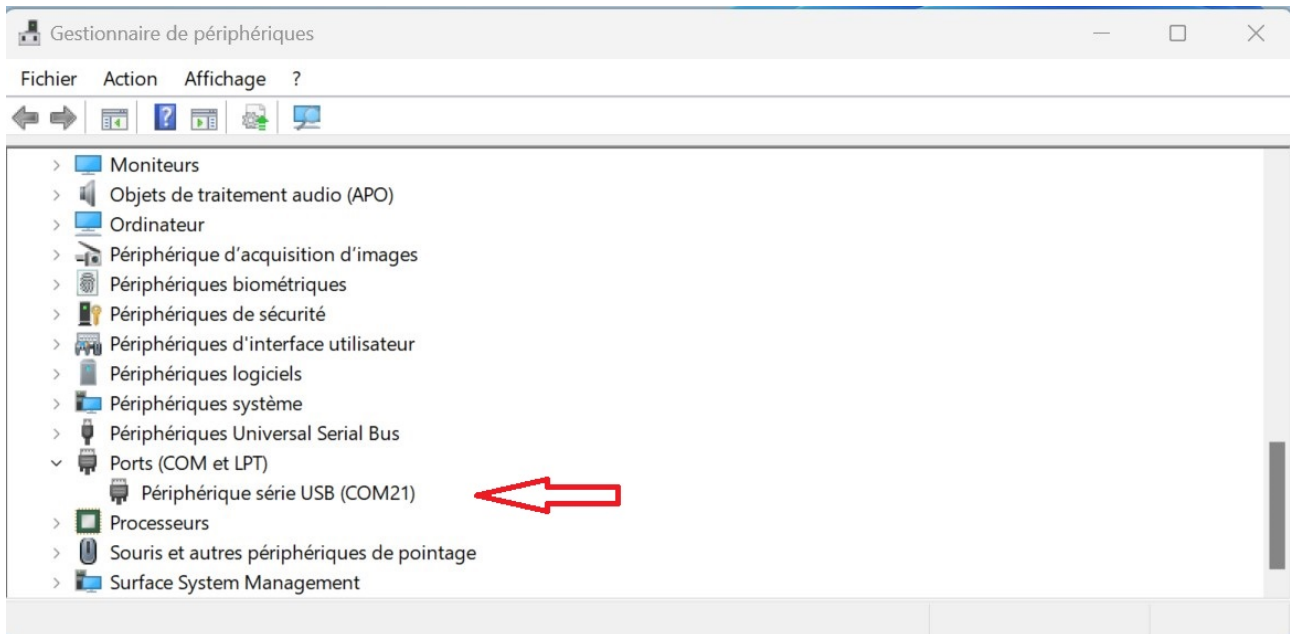


## 4.4 Setting up Prismatic


**Step 1:** Once Prismatic is installed a new icon will be displayed in the taskbar. Right-click on it, then hit "**Settings**".

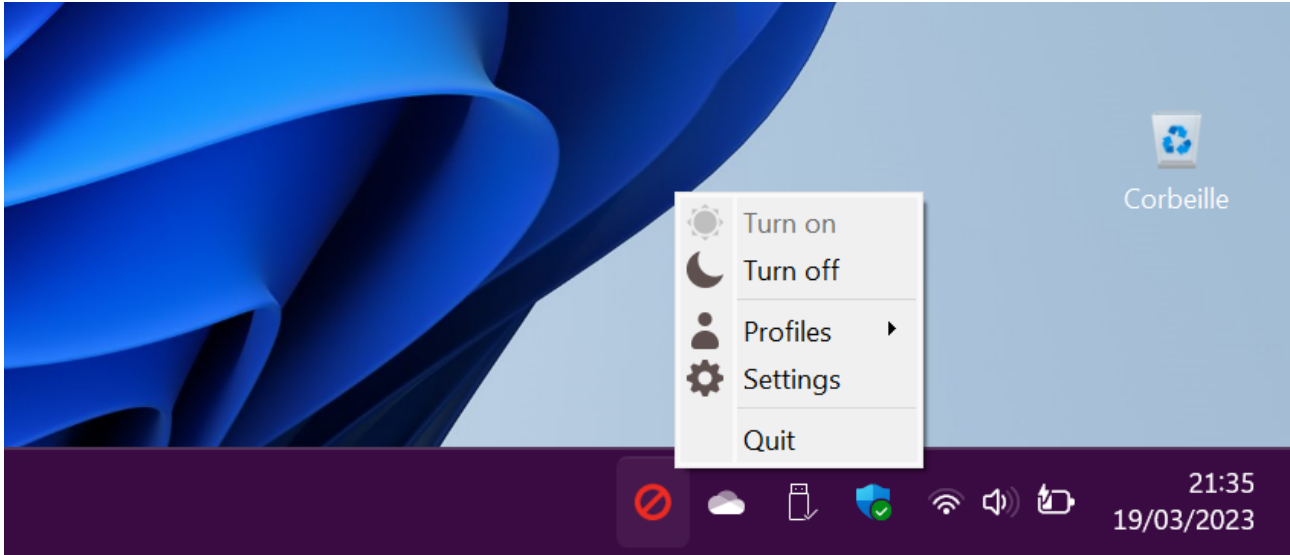


**Step 2:** A new window will open up. Click on **Device**, then "**Run configuration Wizard**".

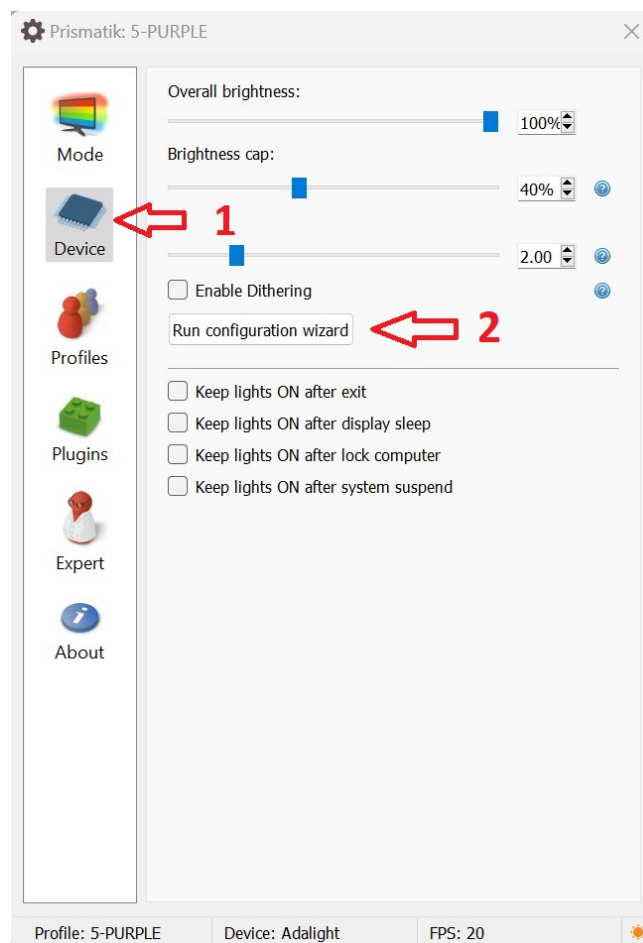


**Step 3:** A new pop up appears, make sure the checkboxes are as follow. Click Next.

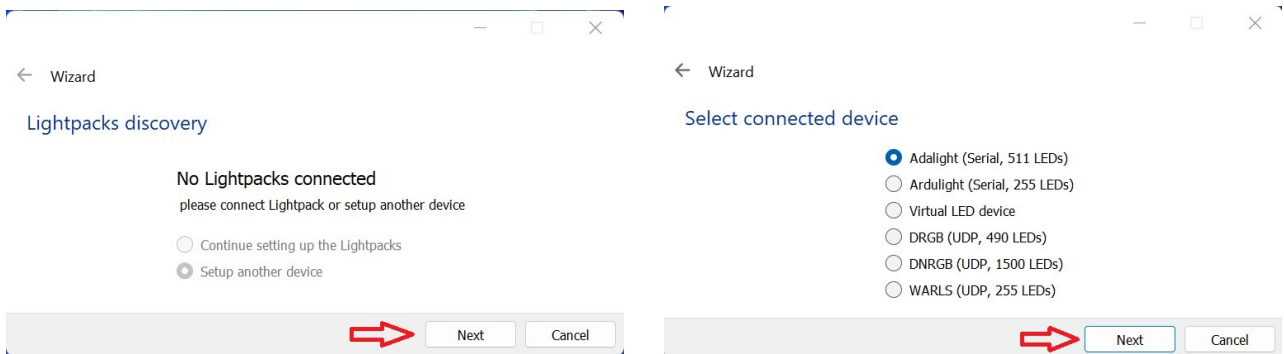

**Step 4:** In "Serial port", type in the corresponding serial port from chapter 4. If configuring the device via Bluetooth. Try one of the two COM ports. If no light is displayed by the end of the configuration wizard. Go through the Wizard again with the second COM port value. The "Baud rate" is set to 1000000 (1 million) ['1' and six '0'].

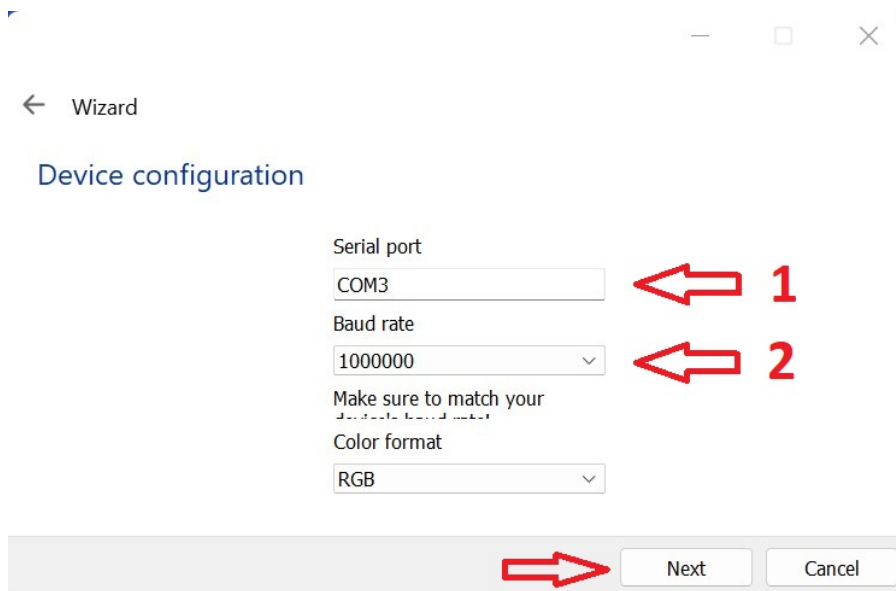

**Step 5:** Pick the profile you want to edit. At this stage you can either edit an existing one or create a new one by clicking on the "+" icon.

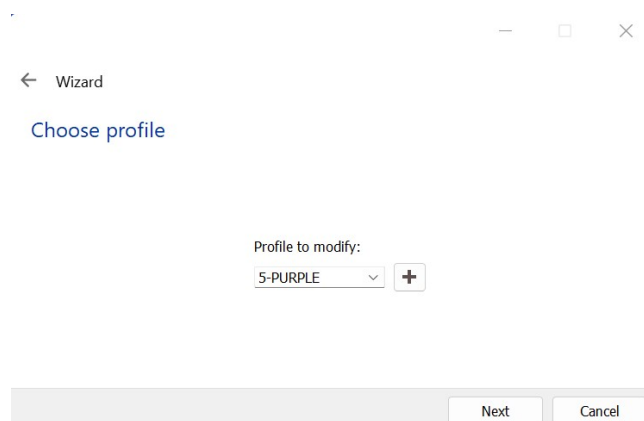


**Step 6:** Now comes the LED configuration around your screen.

Set the number of LEDs your strip contains (1). Then it apply (2).

Depending on the number of LEDs you set, new numbered boxes will show up. **Each box represents the area that one LED of your strip will take the color from and the position of the LED on your strip.**


You can either move the boxes manually around the display as you want or use the pattern options above.

Overall it is highly recommended to play around these options to know how to handle the software. Do not forget to hit **Apply** after every pattern change to update the boxes on-screen accordingly.

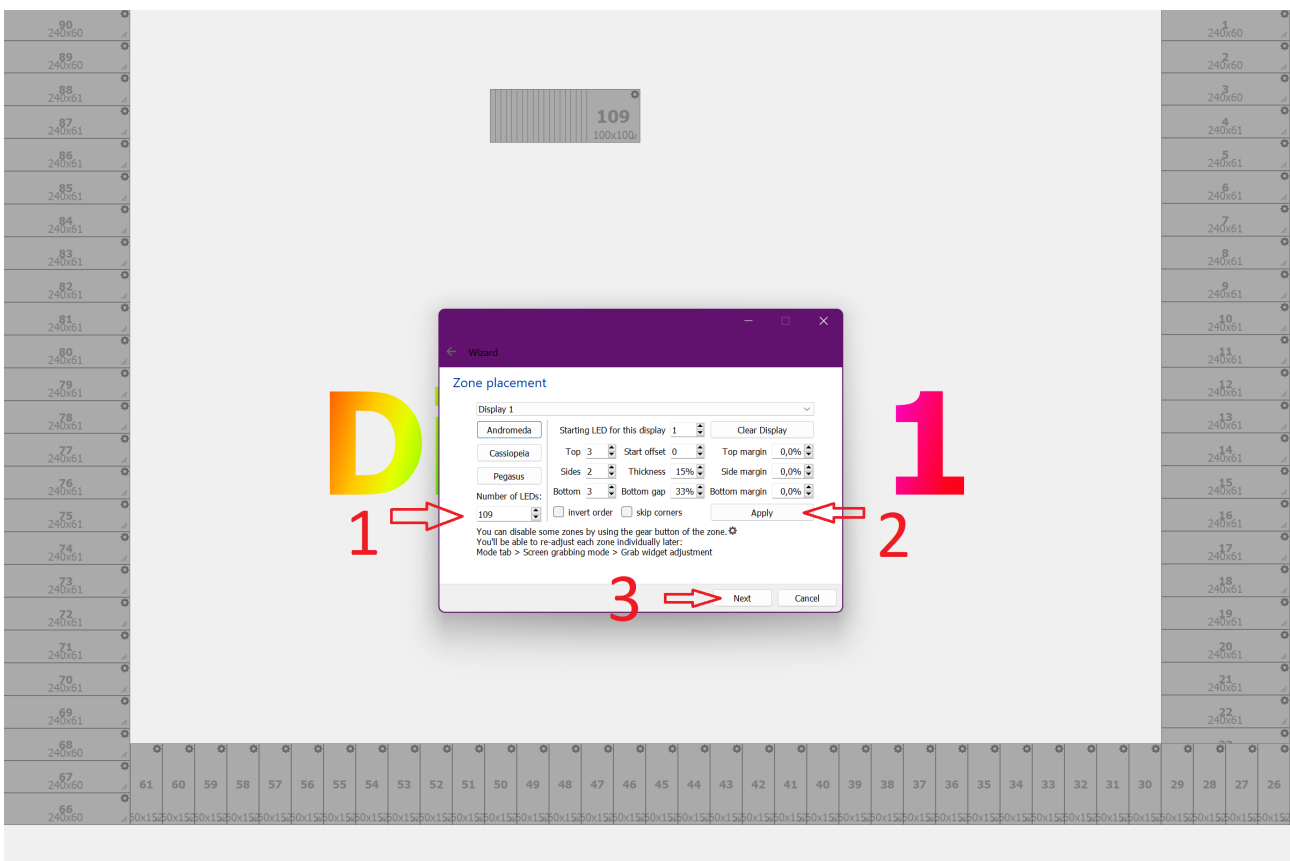


Once you are happy with the settings, click Next.

**Step 6:** Leave everything as default or set both fields with the values below:  
**Single LED current:** 40 mAmps  
**Power Supply current limit:** 5 Amps

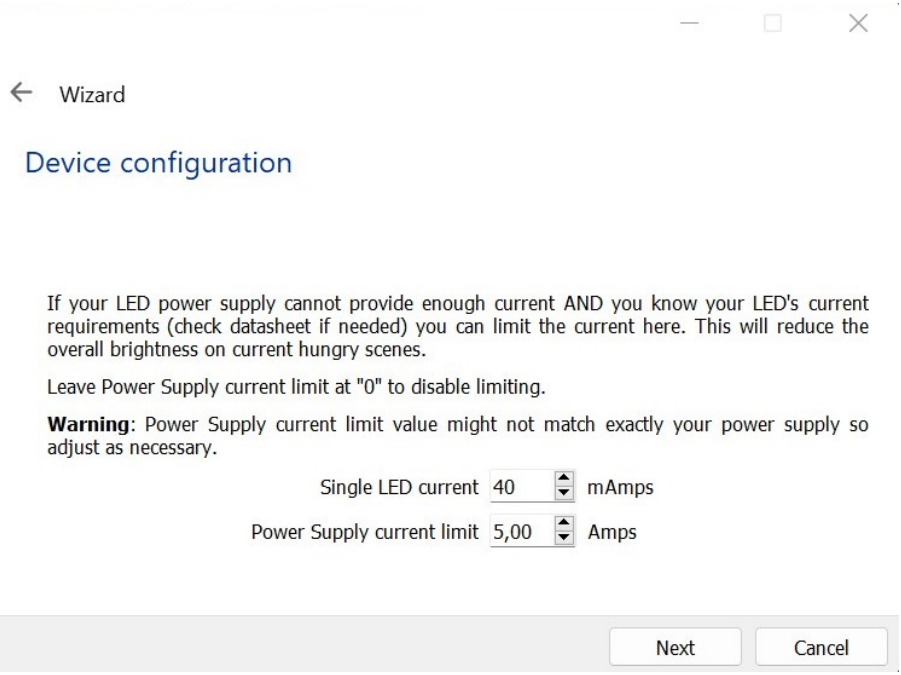

**Step 7:** The last screen is about to set the white balance according to your needs. Unless you need to tweak this option, simply click "Next" to complete the configuration.

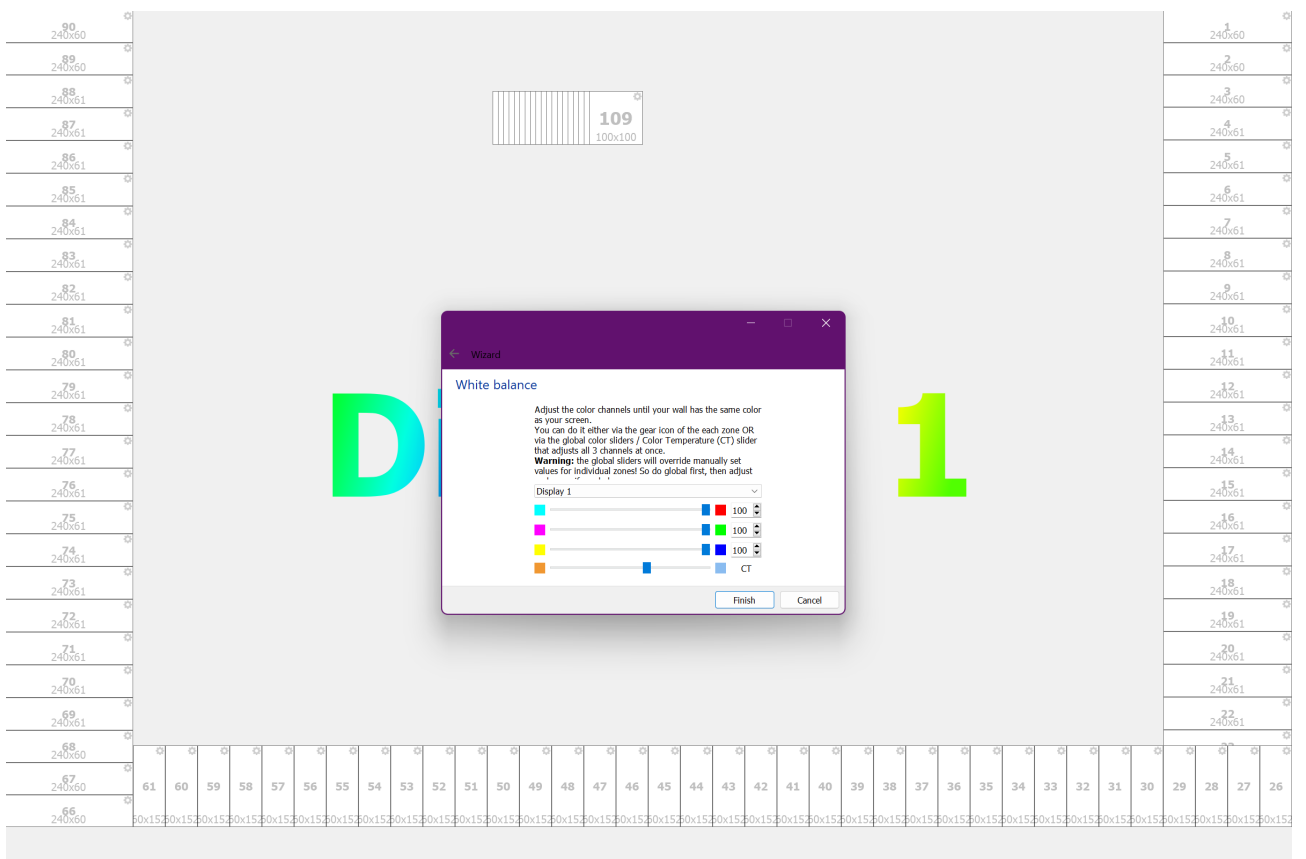

**At this point, the LED strip must light up.**

If it does not, please follow the checklist below:

- **Make sure the LED strip is correctly connected to the proper corresponding pins. Ambiance GND, SIG & 5V must be tied to the LED strip GND, DIN & 5V respectively.**
- **Bluetooth users: Go through the configuration wizard again using the second Bluetooth COM port that is displayed in the Device Manager.**
-

## 5 Revision history

<b>Date</b>	<b>Description</b>	<b>Rev number</b>
January 2023	First release	V1.0

## 6 Appendix



---

## IMPORTANT NOTICE – PLEASE READ CAREFULLY

Biodiance reserves the right to make changes, corrections, enhancements, modifications, and improvements to Biodiance products and/or to this document at any time without notice. Purchasers should obtain the latest relevant information on Biodiance products before placing orders. Biodiance products are sold pursuant to Biodiance’s terms and conditions of sale in place at the time of order acknowledgement.

Purchasers are solely responsible for the choice, selection, and use of Biodiance products and Biodiance assumes no liability for application assistance or the design of Purchasers’ products.

No license, express or implied, to any intellectual property right is granted by Biodiance herein.

Resale of Biodiance products with provisions different from the information set forth herein shall void any warranty granted by Biodiance for such product.

Information in this document supersedes and replaces information previously supplied in any prior versions of this document.

2023 Biodiance – All rights reserved

