## **2CH Temperature Data Logger**

compatible with Arduino Bluetooth Module HC-05



#### **About device:**

Measuring 95mm x 36mm x 30mm.

Easy connect to Android device via Bluetooth.

Digital temperature sensors based on DS18B20 chip.

USB driver based on FT232RL chip.

Power circuit: usb power supply.

Mini usb cable.

Selectable with jumper: Celsius / Fahrenheit.

Selectable output log format with jumper: text or csv (easy transfer data to Excel).

Compatible with Arduino Bluetooth Module HC-05.

Bluetooth distance range 10m.

Synchronous data transfer via bluetooth and usb cable.

Temperature sensor stainless steel tube size: 6x50mm.

UART settings: 9600kbps, 8 bits data, 1 stop bit, 1 start bit.

**Range:**  $-55 \sim 125$ °C /  $-67 \sim 257$ °F.


Accuracy:  $\pm 0.5$ °C/ (-55 ~ 125°C / -67 ~ 257°F).

Resolution: 0.1°C / 0.1°F.






# Jumpers on pcb to select Celsius/Fahrenheit or output format TEXT/CSV

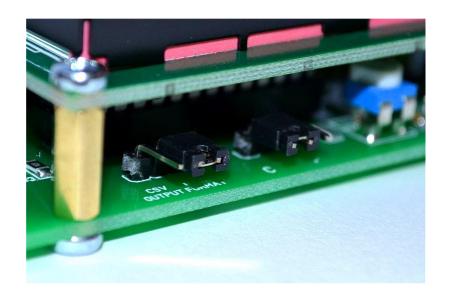


## **Remember how to connect sensors:**

red wire – VCC; black wire – GND; yellow - DATA

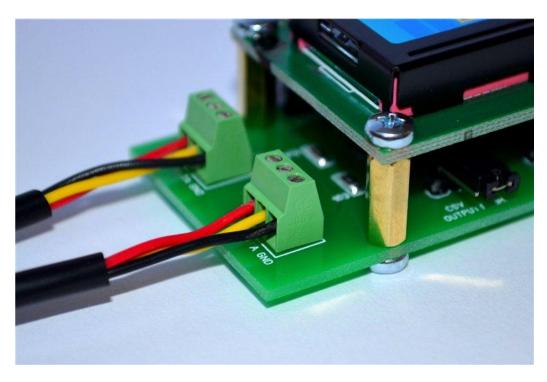


### Remember how to connect Bluetooth HC-05 Module

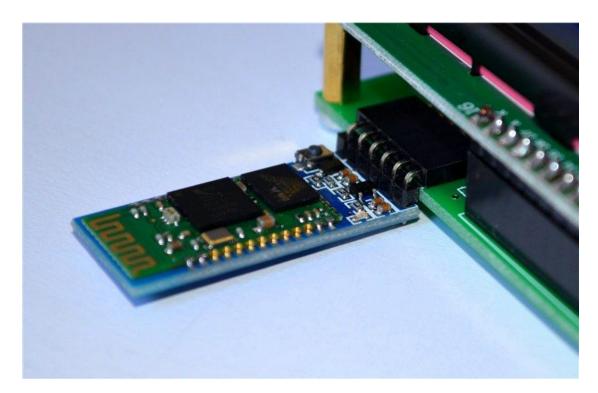

Temperature sensors look like this!



# Temperature logger connected to Android device via Bluetooth (Tablet PC, Onda v989)

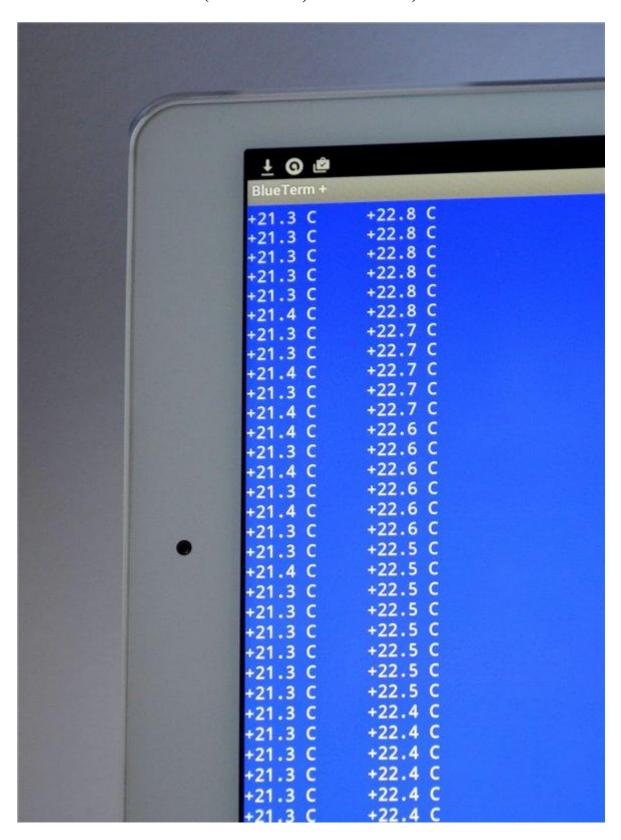

#### Device connected to PC via usb cable (Putty Manager programm)

```
- - X
COM157 - PUTTY
+21.5 C
            +21.8 C
+21.5 C
            +21.8 C
+21.5 C
           +21.8 C
+21.5 C
           +21.8 C
+21.5 C
           +21.9 C
+21.5 C
           +21.8 C
+21.5 C
           +21.8 C
+21.5 C
           +21.8 C
+21.5 C
           +21.8 C
+21.5 C
           +21.9 C
+21.5 C
           +21.8 C
+21.5 C
           +21.8 C
           +21.8 C
+21.5 C
+21.5 C
           +21.8 C
+21.5 C
           +21.8 C
           +21.8 C
+21.5 C
+21.5 C
           +21.8 C
```

```
- 0 X
COM157 - PuTTY
+21.4; +22.1
+21.4;+23.6
+21.4;+24.7
+21.4;+25.6
+21.4;+26.3
+21.4;+26.9
+21.4;+27.5
+21.4;+27.6
+21.4;+27.5
+21.4;+27.4
+21.4;+27.3
+21.4;+27.3
+21.4;+27.2
+21.4;+27.1
+21.4;+27.0
+21.4;+27.0
+21.4;+26.9
+21.4;+26.9
+21.4;+26.8
+21.4;+26.7
+21.4;+26.6
+21.4;+26.6
+21.4;+26.6
```

How to connect logger to Android device: <a href="http://ldrv.ms/1AXODbQ">http://ldrv.ms/1AXODbQ</a>

How to install driver on PC: <a href="http://ldrv.ms/1AXPbyj">http://ldrv.ms/1AXPbyj</a>