USB Port Medium Power Wireless Module SV653

Description

NiceRF

SV653 is a high-power USB interface integrated wireless data transmission module, using high-performance Silicon Lab Si4432 RF chip. Low receiver sensitivity, coupled with industry-leading output power of 500 mW guarantee expand the scope and improve the link performance. Module provides a multi-band multi-channel and network ID to reduce interference during transmission to improve the transmission performance. Users can modify the software or online via PC serial port settings and the RF parameters.



Feature

- 3000m RF line-in-sight distance@1.2kbps
- 433/470/868/915 MHz
- 40 channels
- 4 bytes net ID
- 2 bytes node ID
- Multiple air data rate
- GFSK modulation

Application

- Remote telemetry
 - Auto meter reading
 - Security systems
 - Data logger
 - Wireless data communication

- antenna match automatically and bi-direction switch control
- Support Serial port parameter setting
- USB port
- Sensitivity: -121 dBm
- Max output power: 500 mW
- Voltage: 4.5 ~ 5.5 V
- Temperature: $-40 \sim +85$ °C
- Building residential automation and security
- Healthy monitoring
- Wireless PC peripherals
- Access Control System
- Robot control



Electrical Specifications

	Parameter	Min.	Тур.	Max.	Unit	Conditions	
Operation conditions							
	Supply Voltage	4.5	5.0	5.5	V	(Chr)	
	Operating Temperature	-40	25	+85	°C		
			Current	consumption			
10/m	RX Current	(Channe	26	No.	mA	A.	
	TX current		350		mA	@20dBm	
			RF p	arameter	· · · · ·		
		414.92	433.92	453.92	MHZ	@433MHZ	
2/4	E	470.92	470.92 ((509.92	MHZ	@470MHZ	
	Frequency	849.92	868.92	888.92	MHZ	@868MHZ	
	·	895.92	914.92	934.92	MHZ	@915MHZ	
è	Air data rate	1.2	9.6	38.4	Kbps	GFSK	
P	Output power	20	/ @	+27	dBm	Setting by software	
	Sensitivity		-121		dBm	@1.2kbps	

Technical specification

5.1, Parameter configuration

In configuration mode, users can set the parameters by PC tool or in circuit through UART port. The parameters include channels, frequency, air data rate, out put power, serial port baud rate, data bit, stop bit, parity bit, NET ID and NODE ID. The detailed communication protocol is shown in the programming manual.



vork Todule Communication Tools TEL:0755-61596687 www.nicerf.com Model SV653 Net Parameters NET ID 00000000 NODE ID 0000 AUTO ADD 1 Serial Parameters Baud Rate 9600 9600 Power 7 HELP					
Model SW653 Version 2.62 Net Parameters CLOSE NET ID 0000000 NODE ID AUTO ADD I CLOSE Serial Parameters SET Baud Rate 9600 Parity Data bit 8 Stop RF Parameters 1 Band 433 Data Rate 9600 900 I T HELP	work Lodu	le Communicatio	on Tools		
Net Parameters NET ID 0000000 NODE ID 000 AUTO ADD 1 Serial Parameters Baud Rate 9600 Parity None Data bit 8< Stop 1 RF Parameters Band 433 Data Rate 9600 Power 7 HELP				TEL:0755-6	01596687 www.nicerf.com
Net Parameters NET ID 0000000 NODE ID 000 AUTO ADD 1 Serial Parameters Baud Rate 9600 Parity None Data bit 8< Stop 1 RF Parameters Band 433 Data Rate 9600 Power 7 HELP					
Net Parameters NET ID 0000000 NODE ID 0000 AUTO ADD 1 I Serial Parameters SET Baud Rate 9600 9600 Parity None I Baud Rate 9600 9600 Data Stop 1 I Period </th <th>Model</th> <th>SV653</th> <th>Version</th> <th>2.62</th> <th></th>	Model	SV653	Version	2.62	
NET ID 0000000 NODE ID 0000 AUTO ADD 1 I Serial Parameters Baud Rate 9600 • Parity None • Data bit 8 • Stop 1 • • • • • • • • • • • • • • • • • • •	Not Dorom	otoro			CLOSE
AUTO ADD 1 Image: Serial Parameters Serial Parameters SET Baud Rate 9600 • 9600 • Parity None • Image: Stop 1 • READ READ Band 433 • 10 • Power 7 HELP	Net Param				
Serial Parameters SET Baud Rate 9600 Parity None READ Data bit 8< Stop 1 RF Parameters Data Rate 9600 DeFAULT Band 433 10 Power 7 HELP	NET ID	0000000	NODE ID	0000	
Serial Parameters Baud Rate 9600 9600 Parity None Data bit 8 Stop 1 READ DEFAULT DEFAULT HELP			AUTO AD	D1 🔽	
Baud Rate 9600 Parity None READ Data bit 8< Stop 1 READ RF Parameters DefAULT DefAULT Band 433 Data Rate 9600 10 Power 7 HELP	a : 15				SET
Data bit 8 Stop 1 RF Parameters Band 433 10 Power 7 HELP	Serial Para	ameters]
Data bit 8 Stop 1 RF Parameters Data Rate 9600 Band 433 Data Rate 9600 Channel 10 Power 7	Baud Rate	9600 🖵	Parity	None 💌	
RF Parameters Band 433 Data Rate 9600 HELP HELP	Data bit	8 🗸	Stop	1 💌	READ
Band 433 ▼ Data Rate 9600 ▼ Channel 10 ▼ Power 7					
Band 433 Data Rate 9600 Image: Channel Image: Chan	RF Parame	eters			DEFAULT
HELP	Band	433 💌	Data Rate	9600 💌	
	Channel	10 💌	Power	7 💌	
Frequency 423.92 MHz					HELP
	Frequency	423.92 MHz			
	evice Found!				

Figure 1: Interface of setting tool

Parameter	Length (byte)	Explanation 433MHz / 470MHz / 868MHz / 915MHz		
Frequency	1			
Channel	1	1~40		
Air data rate	1	1200/2400/4800/9600/14400/19200/38400 bps		
Output power level	1	0~7 level		
UART baud rate	1	1200/2400/4800/9600/14400/19200/38400 bps		
UART Data bit	1	7, 8, 9		
UART stop bit	1	1, 2		
UART parity	1	No, Odd, Even		

 Table 1: Parameter specification

SV653

5.2, RSSI function (Optional)

Module has two versions. If users choose the version with RSSI function, the instruction will retrieve the module and receive a data packet of RSSI value in configuration mode.

5.3, Data transmitting

When module is in transmitting mode, data from serial port can be sent via RF chip modulation into the air toward targeted module of the link layer forwarding. When the targeted module receives the RF data from the source, it also converts it into a serial signal and output to the device of the target.

In order to ensure the stability and correctness of the data transmitting, user should pay attention to the following issues:

1) RX/TX Match

In the same network, in order to ensure available of communication, all modules must be in same condition. That means all the parameters such as frequency, channel, net ID are same. The module has a 4-byte network ID. It can not communicate with each other between the different network ID configuration modules. When the network ID is set to all 0, this module can receive any data information.

2) Latency

Since the wireless communication transmitting device receives from the terminal end of a certain amount of data, or wait a certain time before the new data does not start transmitting, the radio communication transmitting end to the receiving end there is a wireless communication delay, the other from the wireless communication terminal apparatus receiving end it will take some time, but the delay time under the same conditions is fixed (specific time is determined by serial rate, air rate determined by the size).

3) Data traffic

Inside the module has a 200-byte buffer, when the serial data rate less than or equal wireless transmission rate can be guaranteed data transfer smoothly, but if the serial port rate is greater than the wireless transmission rate, continuously sending data bytes exceeds the buffer size may data overflow occurs as a result of data loss. Therefore, large amounts of data for continuous transmission, to avoid data loss or errors, you can set the parameters so that the serial transmission rate does not exceed the



wireless transmission rate.

Accessories


1) Module factory accessories include USB cable, as shown below:



2) Antenna

The antenna is an important part of the communication system. Its feature directly affects the performance of the communication system. The match impedance of module is 50 ohms, we recommend that users adopt standard spring antenna.



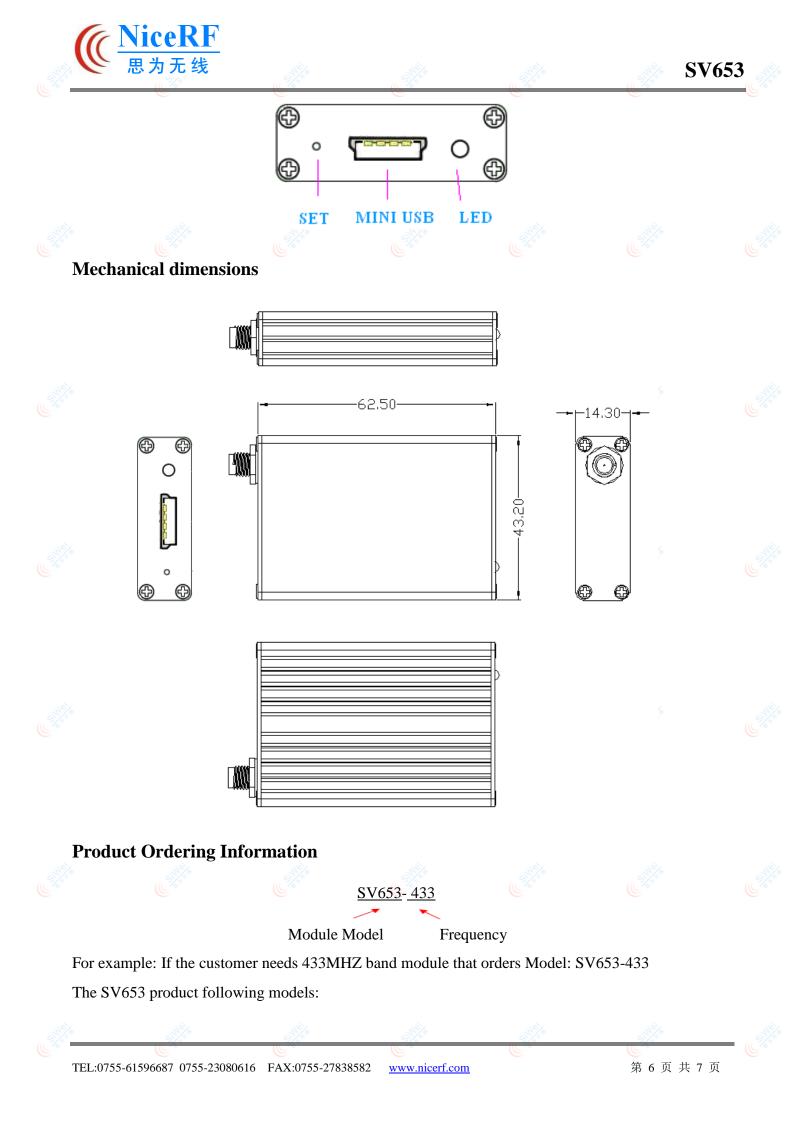



			Contraction of the second s	Contraction of the second s	W. Tom	<u>5 V 053</u>
Order a single Model				Proc	luct type	
		SV653- 433		433MHZ,	Chip module	
		SV653- 470		470MHZ,	Chip module	
		SV653- 868		868MHZ,	Chip module	
		SV653- 915		915MHZ,	Chip module	

Relative Q&A

- a) Why module can not communicate properly?
 - 1) Check the band, channel, rate, NET ID is set to the same;
 - 2) The power connection error, the module is not working;
 - 3) Module is enabled (CS high);
 - 4) The antenna connection is not correct;
 - 5) Module is damaged.
- b) Why far transmission distance?
 - 1) Power supply ripple is too large;
 - 2) The antenna types do not match, or not properly installed;
 - 3) The surrounding environment is harsh, strong interference sources;
 - 4) Surrounding co-channel interference;
- c) Why is receiving data correctly?
 - 1) Improper parameter settings;
 - 2) Module data interface is bad.

CVICE